



Useful guide to the installation of **McMirrors**

Please follow the following tips when installing **McMirrors**


Things to do when installing **McMirrors**

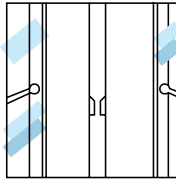

Do ventilate room sufficiently prior to and during installation

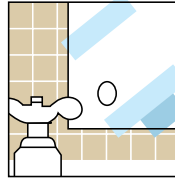

Do fit **McMirror** above the work surface around the baths or hand basins (not flush to these areas), to avoid immersion of the edges in water.

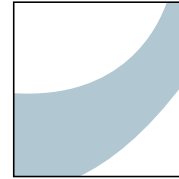


Do paint the area behind the **McMirror** with a high gloss enamel.




Do use only approved silicones and mastics.



Do use an approved edge sealer on edges of **McMirror**.

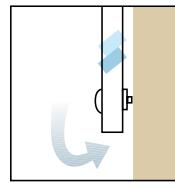


Do allow for air circulation behind the **McMirror** (6mm gap).

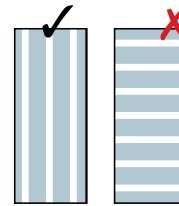


Do apply mastics (tape, glue) vertically, to ensure moisture can escape freely.

Things not to do when installing **McMirrors**

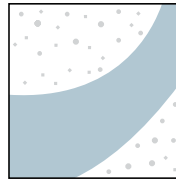

Do not secure the **McMirror** to an unpainted wall. Paint the area behind the **McMirror** with a high gloss enamel

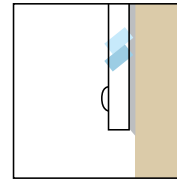

Do not seal the **McMirror** by tiling around it and preventing air circulation behind the **McMirror**

Caring for your mirror

- Ensure that the correct fitment procedures have been followed.
- To clean the **McMirror**, we recommend using a chamois leather dipped in warm water and methylated spirits.
- Do not use acidic or alkaline (ammonia based) cleaners.
- Do not use an abrasive cleaner such as steel wool on the face or back of the mirror, as it will scratch the glass or protective backing.
- Do not apply cleaning fluid directly onto the face of the mirror as it could spill over the edge and onto the back of the mirror.

McCoy's Glass Wholesalers (Pty) Ltd

18 Jurie St Alrode • P O Box 17147 Randhart 1457 • Tel: (011) 864 1313 • Fax: (011) 908 9510
Email: info@mccoysglass.co.za • Website: www.mccoysglass.co.za